



## Roof *Airtight on the inside*

### Vapour control layer overlaps



- Release the Sicral backing strip
- Position Sicral in the centre of the overlap and secure it in place



- Remove backing strip
- Apply Sicral free of tension and creases and press it down vigorously



#### How it should look:

- The overlap is sealed with Sicral 60 and permanently airtight



#### Sealing the crease so that it is airtight:

- Seal the crease in a "T" shape away from the overlap using Sicral




### Butt-joint



- Apply Sicral along the centre of the joint



- Press it on with a hard rubber roller
- Improves the immediate adhesion

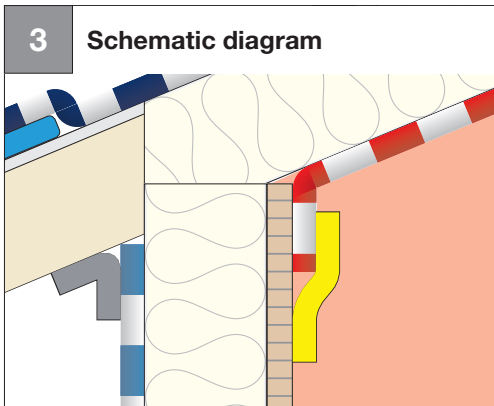

- Vapour control layer joined to timber wall with Sicral

