




## Roof

# Windtight and rainproof on the outside

### Skylight joint

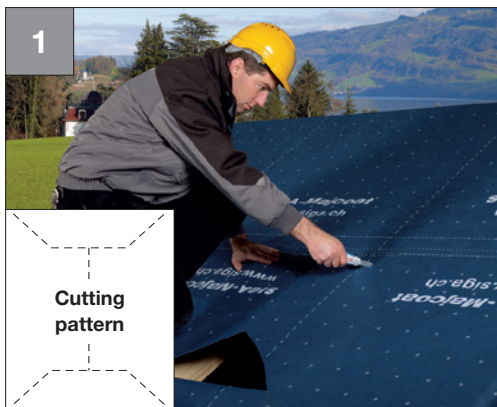

- Make a Y-cut in the roof underlay membrane to the size of the installation frame (see cutting pattern)
- Fold back the sides




- Fit the skylight into the mounting frame
- Screw it on
- **Read and observe the instruction manual supplied by the skylight manufacturer!**



- Secure the roof underlay membrane to installation and skylight frame on all sides



- Cut off approx. 3 cm below the top of the skylight frame

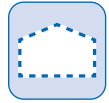


## Windtight and rainproof on the outside



- Seal the corners windtight with short pieces
- **Note: Start sealing from the lowest point!**  
Provides extra protection against water penetration

- Seal the roof underlay membrane all around the skylight frame so that it is windtight

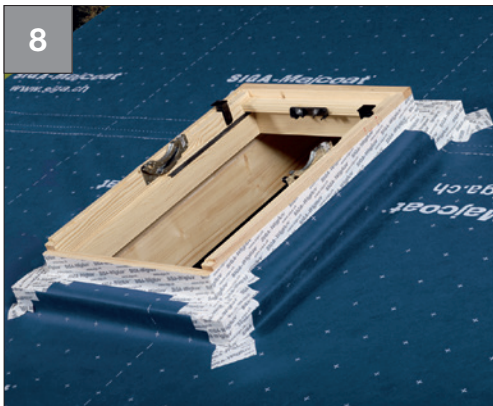

### How it should look:

- Skylight sealed windtightly with Wigluv 60
- Provide the penetration with extra protection with a deflection plate



Wigluv® 60

P. 128