



Wall: Solid construction *Airtight on the inside*

Mounting vapour control layer at internal insulation



- Use double-sided adhesive Twinet 20 when mounting vapour control layers on metal or timber substructures
- Avoids leaky stapling points



- Apply vapour control layer with the writing facing you



- Overlap the vapour control layer by approx. 10 cm

- Seal overlap with Sicrall avoiding tension and wrinkles

Wall: Solid construction *Airtight on the inside*

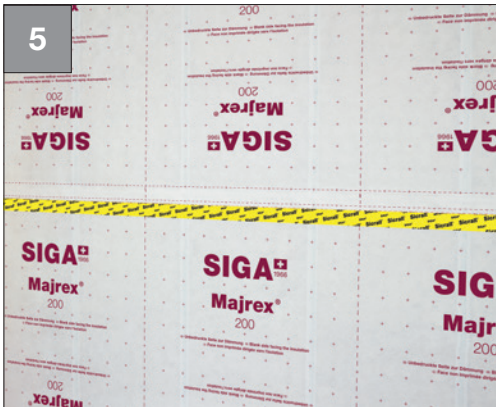

How it should look:

- Vapour control layer mounted on substructure and bonded to be permanently airtight



Majrex® 200

P. 115



Sicrall® 60

P. 118



Twinet® 20

P. 126